

EARTH BUILDING

Earth building around the world

History and use

Earth is an ancient building material that is still used in many different ways with about half the world's population still living in earth buildings. But earth building is not a phenomenon only of the Third World. In France, about 15% of the population live in earth walled houses. In some regions of Australia over 20% of the houses are built with walls of unfired earth.

In western countries, thousands of luxury earth homes have been built in the last few decades, which demonstrate the many qualities of this natural building material, and give the lie to any association with poverty and inferiority.

In New Zealand, early European settlers applied traditional English techniques of earth construction - using predominantly wattle-and-daub in the South Island and rammed earth in the North Island. Pompallier House at Russell is a well-known example of rammed earth construction, which has stood the test of earthquake, storms, and time.

Earth Building in New Zealand has undergone a revival in interest and this interest is reflected in the number of earth buildings that have been erected in the last two decades. There are currently some 600 earth buildings in New Zealand, including a number in Waitakere City.



"Broadgreen," Nelson - a cob mansion built in 1856. Despite breaking many of the design detailing rules for earth building, it has been maintained well, and has survived two major earthquakes without a crack.

Why use earth for building?

Costs, eco-friendliness, aesthetics

Building with earth materials can be a way of helping with sustainable management of the earth's resources. They can be put in place using simple machinery and human energy. Earth buildings avoid deforestation and pollution, and can achieve low energy costs throughout their lifetime - in the initial manufacture and construction, in their use as homes, and eventually in their recycling back to the earth.

Earth is more time-consuming than conventional design and construction, but for those who are providing their own labour, the time involved in earth construction may be less significant than the money cost of modern materials. Many people also value earth construction for its aesthetic qualities.

Advantages of earth building:

- low cost of materials
- low energy and transportation costs
- can be built personally by the homeowner
- thermal mass for natural heating by the sun
- maintains a balanced indoor climate without extremes of temperature
- a renewable non-toxic resource which can be readily recycled
- low fire risk, non-combustible
- virtually soundproof
- natural warm texture and colours
- allows expression of personal creativity using traditional crafts and skills
- can be shaped by hand into attractively rounded forms and niches
- variable light quality reflected from moulded and textured surfaces

Disadvantages of earth building:

- time and expense required for soil testing, calculations, and reports
- requires more customised design effort
- design limitations - e.g. on size of openings for windows and doors
- can be difficult obtaining a mortgage
- construction period longer and also weather-dependent
- higher overall contract cost unless you use your own labour



Will my earth home last?

Durability and structural strength, standards

Because earth lacks the consistency and hardness of many manufactured building materials, you need to protect it from the elements, either by a more frequent maintenance regime, or by design elements of the building like larger roof overhangs.

And while earth construction has good compressive strength, it has relatively low tensile strength to resist the sort of tearing-apart forces that occur in an earthquake. For this reason load-bearing walls must be designed to minimise tensile stresses - careful placement of window openings, for instance.

New Zealand's driving rain and high earthquake risk pose a particular challenge. Nevertheless earth architecture can be built to meet the highest standards of structural safety and all the requirements of the New Zealand Building Code. To this end, Standards New Zealand has produced a set of standards for earth buildings - the first comprehensive set of standards of this nature in the world:

NZS 4297: *Engineering Design of Earth Buildings*

NZS 4298: *Materials and Workmanship for Earth Buildings*

NZS 4299: *Earth Buildings Not Requiring Specific Design.*


The Standards cover only those techniques that have been well investigated during the renaissance in earth building in New Zealand over the past 25 years. They also contain some information on other methods like cob, in which interest is now being shown.

Steps to an earth building

The design and construction process

The process of earth building usually involves the following steps, not always strictly in this order:

1. Identify the building site and check its suitability for a relatively heavy type of building.
2. Select a preferred earth-building technique. (This is dependent partly on available soil types and partly on the finished appearance you want)
3. Consider the suitability of soils on the site or nearby.
4. Carry out field tests of possible construction soils to check their suitability for the preferred earth-building method. Modify the preferred method if necessary.
5. Prepare suitable samples of earth material and carry out pre-construction testing. Modify the earth material mix as required.
6. Design the building and obtain a Building Consent from the Council.
7. Carry out site work and building construction, including quality control testing as required
8. Obtain a Code Compliance Certificate from the Council.

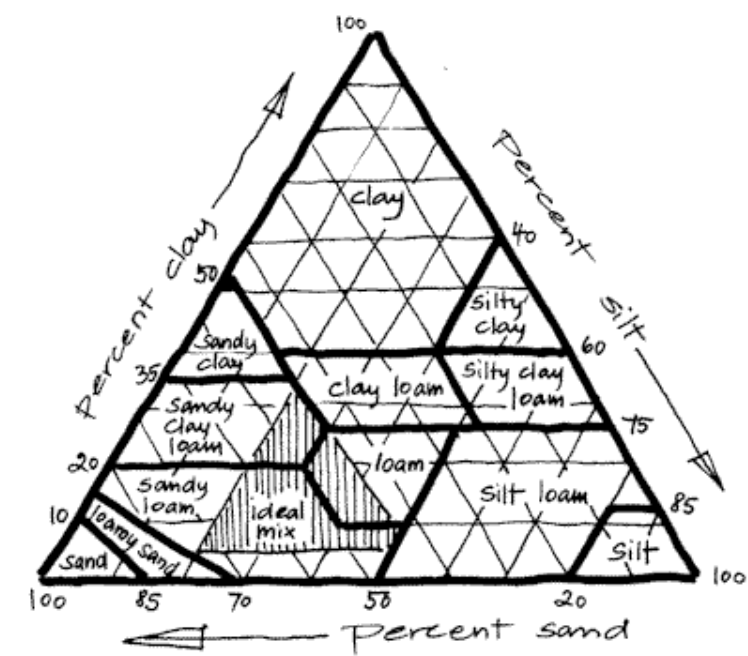


Soil Types - the ideal earth building mix falls within the shaded area

The right earth for the job

Clay content, soil testing

The crucial feature of the soil used for earth building is the clay content. Clays are the smallest soil particles, and it is these which provide the cohesion and waterproofing of the wall. The earth material must contain at least 5% clay to achieve bonding strength. On the other hand clay swells and shrinks with changes of moisture level, so more than 50% clay content is likely to be unmanageable. Some clays can also be destructively water-reactive in some soils - clay is both the magic and the problematic ingredient in earth-building.

Because earth walls are often made from the sub-soils that are available locally, there is a wide variability in the range of soils that are used. Testing for suitability is an important aspect of earth building. NZS 4298 describes the pre-construction tests required to test soil for suitability. These test for strength, durability, and shrinkage. Quality control testing is also explained. Most of these tests can be done with care by owner-builders rather than needing laboratory tests.

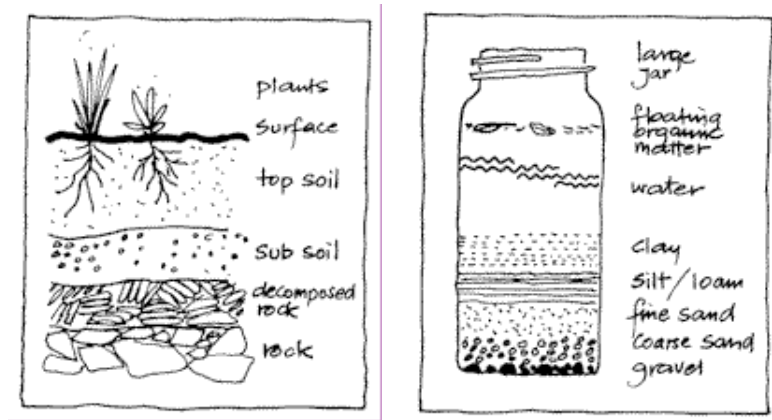


As a first simple test you can drop a handful of sub-soil into a jar of water and shake it well. This is a gravity soil separation test. After 24 hours it will separate into layers of - from the top:

- organic matter (which you don't want),
- the water
- clay 5 to 50% desirable
- silt 20 to 55%
- sand 45 to 80%
- gravel. (which you can sieve out)

This will give you some idea of the proportions of your sub-soil. You can modify unsuitable soils or clays by blending or adding sand, gravel, straw, or other clays. However different earth-building techniques require different soil mixes, so before you begin detailed testing, you should be thinking about that.

Designing an earth building

Structural strength, earthquakes, durability, solar design

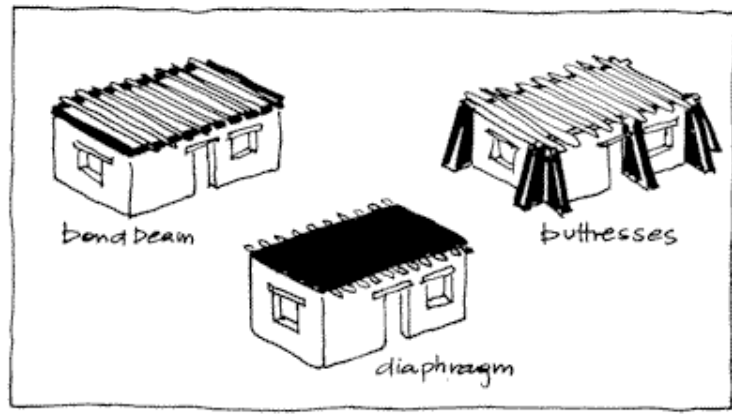

Any architectural design should take account of the limitations of the building materials and techniques. Earth is a heavy, fairly low-strength material so it is used to make thick walls of limited height. The upper storey, if any, is usually confined to an attic within the roof space. It helps to have a light roof structure, and to keep window and door openings fairly small and away from the corners of the building.

A roughly symmetrical structure will behave more predictably in an earthquake. Small simple buildings can be designed according to the conservative approach set out in NZS 4299 (*Earth Buildings Not Requiring Specific Design*). A more adventurous design will require the engineering analysis outlined in NZS 4297 (*Engineering Design of Earth Buildings*).

Earth buildings require stable sites which do not flood and which ideally provide some weather protection from the erosive effect of driving rain. Adequate weather protection is very hard to achieve on sites with extreme wind, like some of our West Coast beach settlements.

Earth building design has been adapted to the climatic conditions here in New Zealand. The traditional earth-building requirements for "good boots and a good hat" are even more important in New Zealand. Foundations that prevent splashing and rising damp, and generous eaves or verandas are essential.

Earth walls are thick enough to meet the insulation required in this part of New Zealand (under NZS 4218.1996 *Energy Efficiency - Housing and Small Envelopes*). And earth, because of its massiveness, acts as a "thermal flywheel," balancing out extremes of temperature.

However, the presence of large eaves and small window openings works against solar heat gain. An experienced earth-building architect can assist with a design that works not only for the structure and durability, but also for passive solar design and an aesthetic treatment worthy of an earth building.



Roofs and floors

Vault or dome structures enable whole spaces to be enclosed with little material other than earth. However such roof structures would be difficult to design for earthquake loading except over a very small space.

An alternative is to cover a specially designed roof structure with a layer of planted or grassed earth. This can integrate a house both visually and ecologically into its natural landscape. It is also very heavy, however, and it would be asking a lot of earth walls to hold up an earth roof.

Earth roofs are not covered by the Earth Building Standards, and because of the engineering required to hold up heavy roofs of this nature, they need professional advice to design them.

Earth floors are usually made from mud bricks, pressed bricks or poured earth. As with all in-situ techniques, shrinkage is a vital issue. You need to find some method of dealing with the cracks that will occur, whether by simply filling them as they occur, or laying the material in a way that will control shrinkage.

The Earth Building Standards (NZS 4298) has a descriptive informative section on earth floors for guidance.



Choosing the earth-building technique

A great variety of earth-building techniques has evolved in different parts of the world in response to local soil, weather and earthquake conditions. You need to consider which building process you will use - whether the walls are to be built in-situ or made into bricks first, whether you will employ a contractor or do the building yourself.

Different techniques also give quite different opportunities in terms of the shapes you can build, the degree to which you can sculpt the walls, and the appearance of the finished walls. However, once the material is in place in the walls, it tends to act in much the same way in terms of structural and practical performance.


The Earth Building Standards have been written to accommodate the most popular forms of earth buildings currently used in New Zealand: rammed earth, poured earth, adobe or mud brick, and pressed brick. Two methods currently being explored in New Zealand - in-situ adobe and cob - are discussed in a less rigorous way. Cob, an old technique, is being revised and used again as advances in engineering analysis (largely as a result of the standards writing collaboration) enable rational engineering solutions to be applied to these structures.

Other methods are not included because they are not currently used, are experimental, or there is insufficient data available to "standardise" the construction. Nevertheless there are promising experiments with reinforcing materials like recycled paper fibre, and many of our earth buildings that have stood the test of earthquake, storms, and time are built of systems not currently used, like wattle-and-daub, mud-and-stud, or post-and-beam.

You could still obtain a building consent for one of these alternative techniques, but it would have to be processed under the "alternative solutions" pathways of the Building Code, whereby the applicant has to demonstrate to the Council that the requirements of the Building Code can be met.

The required testing procedures for the various techniques of earth building are contained in the Standards. The following sections outline the basic characteristics of each technique.

Rammed earth (pise)

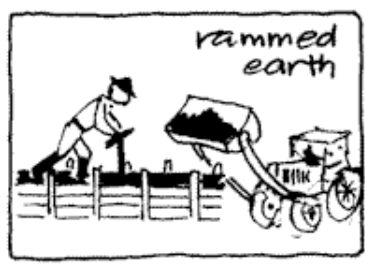

Rammed earth (or pise) is an ancient technique that has been dated back to at least 7000 BC in Pakistan. It has been used in many structures around the world, most notably in parts of the Great Wall of China. Although most earth buildings are single or two-storied, a five-storey hotel was completed recently in Corralben, Australia.

Rammed earth walls are formed from soil that is just damp enough to hold together. You tamp the soil between shutters with manual or pneumatic rammers. The mix is dry enough that once the material is rammed into place and a wall panel completed, the shuttering can be removed immediately. Rammed earth walls are limited to the shapes that can be built with your removable shuttering, so you should design the building to make practical and effective use of the available shuttering.


The walls are often left as they are, "off the form," and can reveal a natural-looking strata pattern from the ramming process. Consistent workmanship is critical for both the appearance and the strength of rammed earth walls, so site work has to be of high quality - an area of wall that is not mixed or rammed correctly can ruin a whole panel.

One difficulty with the rammed earth method is that strict limits have to be placed on shrinkage to eliminate cracking. You will have to add sand to a lot of soils to reduce shrinkage. Pre-construction tests for shrinkage and the appropriate limits are detailed in NZS 4298, which also outlines compression and durability tests, and a simple on-site test for moisture content.

Often cement or hydrated lime is added to improve durability, but successful structures are built using suitable soils without such additives. A sandy crumbly soil (with a clay content around 15-30%) is best, as it is easily worked and has minimal shrinkage.

The shuttering is best designed so that whole wall panels can be built in one go, thus eliminating joints within panels as much as possible.

Poured earth

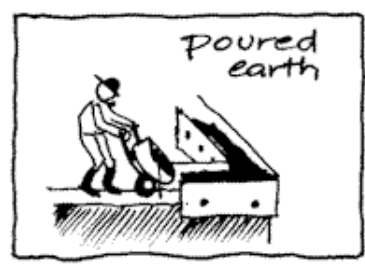

This technique involves mixing water with the earth until you can pour it into moulds without creating voids - typically about cake-mix consistency. The mix is placed into


moulds set up directly in place on the wall, and once it has set the mould is removed.

The mix used in this technique has a much higher moisture content than rammed earth, so the shrinkage is potentially much higher. This means that the soil mix has to be carefully controlled to avoid unsightly and structurally damaging cracks opening up as the material dries. Sometimes the moulds are set up in a castle like pattern, and the intervening gaps are filled with a second pour after some shrinkage has taken place with the setting of the first pour.

Shuttering systems developed in Australia are now available here. They limit the size of each poured earth section, and by controlling the sequence of pours fine walls can be created. The shapes of walls are constrained by the shuttering used, but they can be quite flexible in their arrangement. The surface of the work is often dominated by the size of the cast units, and is usually fairly smooth unless rubbed or modified after the shuttering is removed.

Often this technique uses around 10% cement in the product to assist with durability and shrinkage control. Appropriate tests for this technique are detailed in NZS 4298.

Adobe (mud bricks)

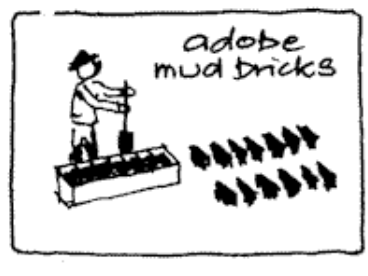

Adobe or mud-brick building is an ancient technique dating back at least to Jericho (8300 BC). The oldest continually inhabited structures in the world are adobe. Some built in North America around 900 years ago are still in use.

Mud bricks are probably the simplest and easiest form of earth building. Most of the shrinkage takes place in the brick itself before the walls are built, so shrinkage cracking is much less of a problem. The bricks can be cast from a greater variety of soils, and can cope with more clay content than is suitable for the in-situ techniques. You cast mud bricks in open moulds on the ground, using a blend of earth and water with the consistency of cake mix. You can withdraw the moulds either straightaway or the next day.

Once they are firm enough you lift the bricks onto their sides, trim them, and then stack them to air-dry and cure. You can cast different shapes of bricks to create wedges for corners or arches, 45-degree corners, or rebates for jambs. You can cut holes in newly cast bricks for reinforcing or services.


You lay the bricks up into the wall with a mortar similar to the brick consistency, although modified sometimes for shrinkage and workability (often by adding sand). The finished walls are bagged as they are laid, a practice whereby the mortar mix is rubbed thinly into and over the walls to fill in gaps and cracks.

Often a mud render is applied as a surface coating. This coating will sometimes have a dust retardant in it - a traditional and successful mixture uses clay and sand mixed with fresh cow manure. You can also use wallpaper size or boiled linseed oil

as an anti-dust protector. The wall surface tends to be a bit uneven unless plastered. It has a "soft" look, although the material is quite hard when dry.

Sometimes adobe bricks are stabilised with a small percentage of hydrated lime or cement to improve durability. Mortar shrinkage is more of a problem with this type of construction than shrinkage of the bricks themselves. The necessary tests for adobe bricks and mortars are detailed in NZS 4298.

Pressed earth brick

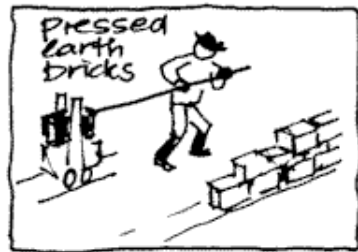


One of the more modern additions to the earth building scene, dating from last century, the making of compressed earth bricks in manually or engine-operated presses is now a widespread practice around the world.

You make the bricks from a dry mix, often stabilised with up to 10% cement. The compression given by the machine compacts the soil particles together to make dense regular shaped bricks, usually around 300 x 300 x 130mm in size. Most presses will enable some variety of shapes to be made so holes for reinforcing and rebates for window jambs can be pre-formed, but bricks of a different size are usually difficult to produce. You can produce the bricks on-site using a manual ram, or buy them from a manufacturer. Earth bricks are currently being produced commercially at Muriwai and Helensville in the Auckland region. Of course earth bricks with a high cement content trucked to your site don't score so well on the energy conservation scale.

Being hard, dense and regular, earth bricks can be laid up very precisely to form geometric shapes, or laid more loosely depending on the aesthetic results required. These bricks are the nearest things in earth building to concrete blocks in design and finish considerations.

You can sometimes use a sand/cement/earth mix for the mortar, although often a mix of hydrated lime, cement and sand performs better. Necessary tests are detailed in NZS 4298.

In-situ adobe

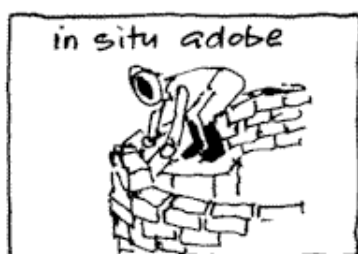


Very free-form walls are possible with this technique and the surface finish can vary enormously depending on the skill and whim of the craftsman doing the finishing work.

You use a wet mix about the consistency of stiff cake mix, and cast it into place in a wall using a small sheet metal mould (typically about 300 x 300 x 150mm high). You remove the mould immediately and "work" the brick against previous work to create good bonding and to give the desired surface finish.

Once again shrinkage is the critical issue, although the working and compression of the brick's surface as it dries overcomes some of the material's shrinkage. Again, cement, hydrated lime or asphalt additives are often used.

Strict limits have to be placed on shrinkage to eliminate cracking. Suggested pre-construction tests for shrinkage and the appropriate limits are given in an informative appendix to NZS 4298, but lack of experience means that definitive "standards" are not yet appropriate with this technique.

Cob

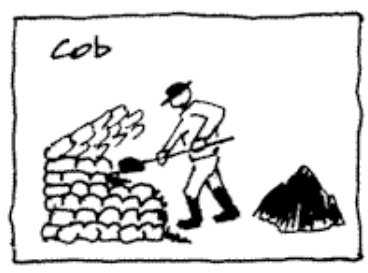

Cob is an old technique that offers the potential to create very sculptural wall shapes. Many of the old cob cottages in the South Island have survived from the last century.

For cob construction you mix straw and often small gravel into a sandy soil. You form the mixture into lumps or cobs, which you then throw on to the wall and stamp or work into the previous layer. The rough surface is later trimmed up, and usually rendered to give a smooth surface. The result is often a softly undulating surface, which can follow whatever shape you choose to build into the wall. Cob builds extra thick or curved walls easily, and it is common for them to taper inwards towards the top.

This technique is also very shrinkage sensitive and a mixture has to be found that minimises shrinkage. Because of the comparative lack of modern experience in New Zealand with cob, it is included in the Earth Building Standards only as an informative section, so careful analysis of materials and design is required.

Straw bale construction




Straw bale houses have enormously good insulation values, and you can build them with relative ease and speed. They may be load-bearing, but more often they incorporate a post-and-beam frame. The bales are finished with a coat of plaster - often earth-based.

The design issues are similar to earth buildings, but the need to avoid moisture and weathering is even more crucial. The bales must be dry before installation and remain dry throughout their life, as once wet they are more likely to compost than dry out. The construction detailing and plaster coatings make or break straw bale construction.

Straw bale houses were developed in America and are rising in popularity. However the Earth Building Standards Committee declined to write a straw bale standard at this stage because of the very small number of built examples in New Zealand or Australia to "standardise". If you wanted to build a straw bale house you would need to engage an experienced designer, and do the analysis to apply for a building permit as an "Alternative Solution" under the Building Code.

Other types of construction

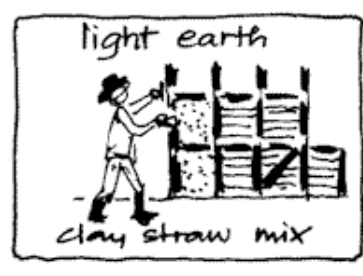

The following construction techniques are very common historically and are experiencing a revival in parts of Europe. Although well-maintained New Zealand examples have stood the test of time, the techniques are seldom used here nowadays and are not covered by the New Zealand Standards.

Light earth involves tamping a clay mix containing a lot of straw into a timber framework and then cladding both faces. This method uses the good insulation qualities of straw and gives it a fireproofing of clay. The drawback is that the timber framework can require as much timber as a stud wall, and the material needs a waterproof cladding or plaster of some kind and an internal plaster finish. The end result is that the earth/straw mixture is acting mostly as a form of insulation.

Wattle and daub starts with a latticework of light branches or timber. An earth/plaster mix is then "daubed" onto the latticework, forced into the gaps, and finished to give a serviceable surface.

In the **post and beam** technique, a heavy timber structure is built first, and then earth wall panels, either of brick or monolithic construction, are built between the posts and beams. The earth is generally not load-bearing. This is a very practical form of construction - the roof can go on before the walls - but there are engineering difficulties with differential shrinkage and with achieving earthquake-resistant connections between the earth panels and the timber structure.

Surface finishes

There are a variety of surface coatings suitable for earth building, but none of them take the place of good primary weather protection achieved by good design, detailing and construction. And you cannot use a surface coating to improve the performance of any earth material in the durability tests outlined in NZS 4298

Surface coatings are better viewed as aesthetic coatings rather than weather protection. They can also help with dust prevention (although this is not a concern with most earth mixes) and sometimes with localised waterproofing.

Hydrated lime or gypsum-based plasters or washes are usually most sympathetic to earth building and least liable to failure. A mud plaster made from the same ingredients as the wall (but with more water in the mix) will offer a natural finish. Cement based renders need careful application - without suitable mechanical fixing they can separate from the wall itself because of differential expansion and contraction.

Because of the wide variability of materials used in earth buildings, surface coatings appear in the Standards as informative information only.



A recently built earth home designed by Graeme North

Further information

Earth Building Standards are to be published on 14 November 1998. They will be available from Standards Association of New Zealand: (*Private Bag 2439, Wellington 6020*):

NZS 4297: *Engineering Design of Earth Buildings*

NZS 4298: *Materials and Workmanship for Earth Buildings*

NZS 4299: *Earth Buildings Not Requiring Specific Design*.

The following publications may also be useful:

Joseph N. Tibbets - *The Earth Builders' Encyclopedia*

Gregory Ah Ket - *How to Build a Mudbrick House*

BBE manual No 9 - *Earth Building*

Miles Allen - *Out of the Ground: Earthbuilding in New Zealand*

David Easton - *Dwelling on Earth*

Brian Woodward - *Mud Brick Notes*

The Earth Building Association of New Zealand (EBANZ - *P.O. Box 1452, Whangarei*). hires books and videos and organises displays of earth buildings, training, educational workshops, publications, research, testing and promotion. Their booklist is provided.

Further information can be obtained from the contributing writers for this chapter of Waitakere City's *Sustainable Home Guidelines*:

Graeme North - registered architect, chairman of the Standards
New Zealand Technical Committee for Earth Building, inaugural
chairman of EBANZ
18 Neville St, Warkworth. Phone (09) 425 9305. Fax (09) 425 8216.
[Email graeme.north@xtra.co.nz](mailto:graeme.north@xtra.co.nz)
Reinhard Kanuka-Fuchs, ANZIA, architect and director of the
Building Biology and Ecology Institute of New Zealand
PO Box 35 921, Browns Bay, North Shore City, Auckland
ph/fax: 09-479 3161, mob: 025-278 5102, e-mail:
bbe@ecoprojects.co.nz

Earth Building Association of New Zealand book list

1. Southwest *"The Earth Builders' Encyclopedia"* by Joseph N. Tibbets Solar adobe School, New Mexico, U.S.A. 1989, 196 pages, 10 colour plates and numerous b & w photographs, diagrams and illustrations. This book is an alphabetical encyclopedia which gives excellent coverage to past and present earth building techniques with an emphasis on adobe (mud brick) but useful information on rammed earth also.
2. "Earth Wall Construction(,n -Bulletin #5" Building Technology Centre, Chatswood, NSW, Australia. 1987, 64 pages, 20 colour plates and many b & w photographs, diagrams and illustrations. This book covers many aspects of several earth building techniques including rammed earth, adobe and pressed bricks There is much interesting information ranging from basic engineering to soil testing procedures.
3. "Soil-cement Brick House" By Pam Laybourne. 24 pages, b & w photographs and diagrams. Pam Laybourne built herself a home in New Zealand using Cinva pressed bricks. This book takes you through the process. An owner build herself a home I
4. "Dwelling On Earth" By David Easton. 1991, 115 pages, 60 illustrations. A manual for the professional application of earth building techniques, especially rammed earth. David Easton is an experienced earth builder and this his second book covers all aspects from design considerations to earth as art. Useful for owner builders as well as commercial practitioners.
5. "Mud-Brick Notes" By Brian Woodward. This is a photocopied reproduction of a booklet that this well known and very experienced Australian earth architect has given us permission to reproduce, and is an excellent adobe reference.
6. "EBANZ Notes on Aspects of Earth Building in New Zealand" By T Drusteen (engineer) and Graeme North (architect). 1991. This EBANZ booklet has details of material testing, sample specifications, and insulation performance for adobe, rammed earth, and pressed brick. In other words, the information you need to get a building permit by two of N.Z.s most experienced earth-building designers.
7. "Earthbrick Construction" 6 plans and sketches, preliminary quantities and building tips by Pam Laybourne.
8. "How to Build a Mudbrick House" By Gregory Ah Ket. A4 size soft cover, 140 pages, some colour photos, many black and white. Also many illustrations. Ideal for the person who has determined to build in adobe.
9. "Earth Architecture" (by Graeme North)

Graeme North is a registered architect who has designed many earth buildings incorporating many different techniques since 1971. He was the inaugural chairman of the Earth Building Association of New Zealand Inc., a body devoted to promoting the art and science of earth building and is a body, which is now expanding its area of interest slightly to include Straw bale construction

Graeme is Chairman of the Standards New Zealand Technical Committee for Earth Building Standards. He can be contacted at 18 Neville Street, Warkworth ph 09 4259305, fax